

# **POOLMASTER®**

We Make Water Fun!

Thank you for your purchase of our Terra Cotta Clock and/or Thermometer. Your clock / thermometer is weather-resistant and ready for indoor or outdoor use. For product longevity, it is recommended to keep it away from artificial heat and out of direct sunlight. Below you will find some helpful hints for product use.

## **CLOCK**

- During transit, the second hand of the clock may become slightly bowed causing it to catch on the minute hand during operation. To easily rectify this, gently bend the second hand back to ensure that it is clear from catching on the minute hand.
- Remove battery cover on back of clock and insert 1 AA battery in the correct orientation as directed on the clock and replace cover. Use the wheel on the back to adjust to the correct time.

## **THERMOMETER**

- The thermometer has been set at the factory, however, it is recommended to place the thermometer in an area where the temperature is known, such as your home where a thermostat can help you match the temperature, for approximately 90 minutes to double check for proper calibration. If the thermometer needs to be adjusted, simply turn the rotation wheel on the back higher (+) or lower (-), then place in desired location.

## **MOUNTING**

Mount to any surface using a nail or screw, not included. Hang clock / thermometer by using the hanger on the back. Do not hang from the lip / outer rim of the clock.

For Further Information, Contact Our Toll Free Consumer Service Number: 1-800-854-1492  
[www.poolmaster.com](http://www.poolmaster.com)