

POOLMASTER®

We Make Water Fun!

Thank you for your purchase. Your clock is weather-resistant and ready for indoor or outdoor use.

CLOCK

Remove battery cover on back of clock and insert 1 AA battery in the correct orientation as directed on the clock and replace cover. Use the wheel on the back to adjust to the correct time.

MOUNTING

Mount to any surface using a nail or screw, not included. Hang clock by using the hanger on the back. Do not hang from the lip / outer rim of the clock.

For Further Information, Contact Our Toll Free Consumer Service Number: 1-800-854-1492
www.poolmaster.com