



CUSHION REPLACEMENT INSTRUCTIONS

These steps will guide you on how to replace your lounge cushion.

Tools needed:

1. Philips screw driver
2. Rubber mallet
3. Cutting pliers

Steps:

1. Turn lounge upside down.
2. Remove the floats from the lounge with Phillips screw driver.
3. Remove/ cut the hub caps from the aluminum rod with cutting pliers.
4. With a rubber mallet, remove the PVC pipe from the aluminum rod.
5. Remove the aluminum rod from old cushion.
6. Remove the back and seat frames from the old cushion.
7. Insert the back and seat frames on the newer cushion.
8. Reinsert the aluminum rod through the newer cushion sleeve.
9. Reinstall the PVC frames to the aluminum rod. Secure with the supplied hub caps.
10. Mount the frame to the floats.