

# **POOLMASTER®**

We Make Water Fun!



## **27402 Deluxe Air Relief Vacuum**

Control the amount of suction by simply adjusting the valves to the desired open position necessary to relieve the strength of the suction produced by your pump.

Start by adjusting the valves to the 100% open position to determine the amount of suction being produced by your pump. If more suction is required, adjust the valves to 75% open position. Continue with this process of adjusting the valves and testing the suction strength until you find a setting that works safely for your pool.



**100% Open**



**75% Open**



**50% Open**



**25% Open**



**100% Closed**

For questions or comments, contact Customer Support at 1-800-854-1492 or email us at [info@poolmaster.com](mailto:info@poolmaster.com)

**poolmaster.com**