

Power Air Pump 87493

POOLMASTER®

We Make Water Fun! 770 Del Paso Road, Sacramento, CA 95834-0308

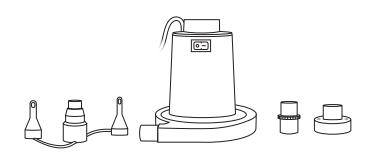

INCLUDES: Air Pump, Inflation Connector, Deflation Connector, Adapter with two Nozzles

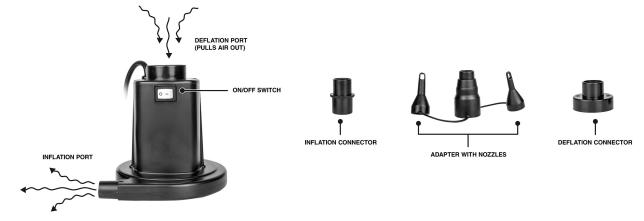


Read Before Use

- This handheld air pump is for use on a nominal 120-volt AC circuit with grounded outlet
- This is a high-volume, low-pressure pump. It is intended to inflate/deflate items such as inflatable boats, air mattresses, etc. This pump in not designed for continuous use. Extended operation over 30 min can overheat and damage the pump.
- Keep air pump out of reach of children.
- Do not obstruct the inflation/deflation port and keep them ventilated at all times.
- To shorten the motor's working time and faster inflation, always use the most suitable adapter/nozzle for your inflatable valve size.
- Improper installation of the grounding plug can result in a risk of electric shock... Make sure the pump is connected to a grounding outlet protected by a ground-fault circuit interrupter (GFCI).
- To reduce the risk of electric shock, do not connect unit to an extension cord.
- Check with a qualified electrician if the grounding instructions are not completely understood, or if in doubt whether the product is properly grounded.
- Carefully follow the instructions on inflatable item when inflating. Never exceed the recommended pressure, otherwise serious injury may be caused if inflatable bursts.
- Never leave the pump unattended while the pump is in use.
- Do not keep/use the pump in wet conditions.
- Never allow sand, small rocks, etc to be sucked into inflation/deflation port when using pump.
- Never look inside or point the inflation/deflation port toward your eyes when the pump is working.
- Never attempt to put hand or fingers into the inflation/deflation port at any time.
- To reduce the risk of electric shock and injury to persons, do not use in a window.
- To reduce the risk of electric shock, do not use this fan with any solid-state speed control device.
- Do not use this pump as a hair dryer. Keep hair away from the inflation port while pump is in use.

Questions or comments? Call:

800.854.1492

poolmaster.com info@poolmaster.com

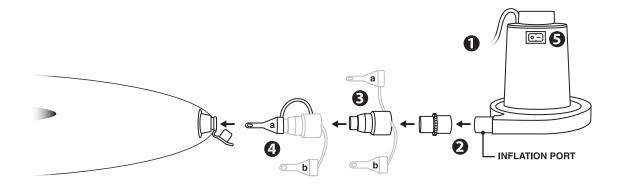

TO INFLATE

- 1. Plug in pump.
- 2. Insert inflation connector to inflation port.
- 3. Insert adapter with nozzles.
- **4.** Choose selected nozzle (a or b) for inflation or for larger valve openings, use with adapter only.
- 5. Turn on unit to inflate.
- **6.** The valve of inflatable item should not be obstructed, otherwise it could over heat and damage the pump.
- 7. Never use the deflation vent when inflating an item. On large items such as an inflatable boat or king-size air mattress, the pump should fit directly onto the valve of inflatable item for fast inflation. Use appropriate adapter for smaller valves on items like as single-size air mattress.

NOTE: For smaller valves, you may have to pinch valve base to open up safety valve.

TO DEFLATE

- 1. Plug in pump.
- 2. Insert deflation connector onto deflation port.
- **3.** Insert adapter with nozzles.
- 4. Choose selected nozzle (a or b) for deflation.
- 5. Turn on unit to deflate.

NOTE: For smaller valves, you may have to pinch valve base to open up safety valve.

