


Rio Sun Adjustable Lounge


70739/70745

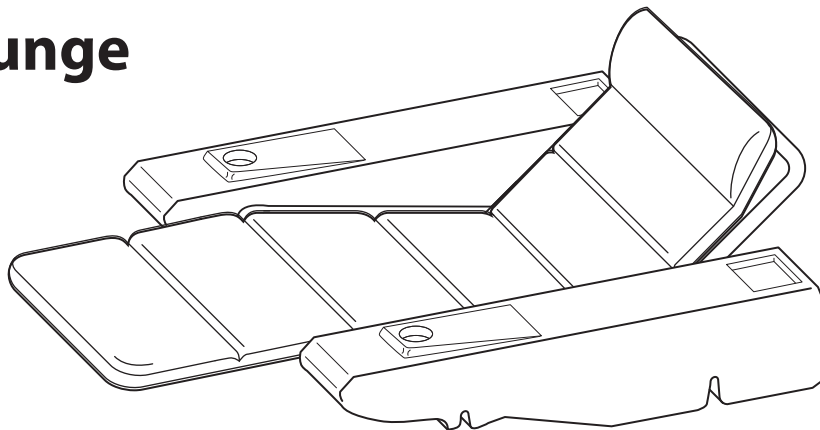


POOLMASTER®

770 Del Paso Road
Sacramento, CA 95834-0308

Contents

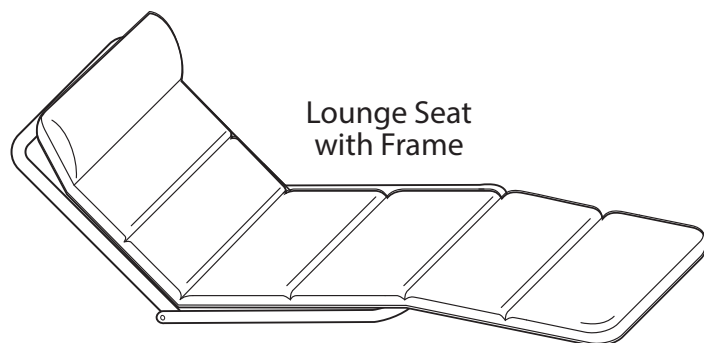


Lounge Seat
with Frame

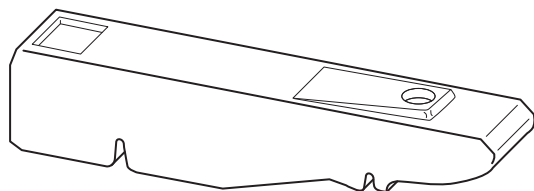


Polyform™ Pontoons x2




Mounting Bracket x4

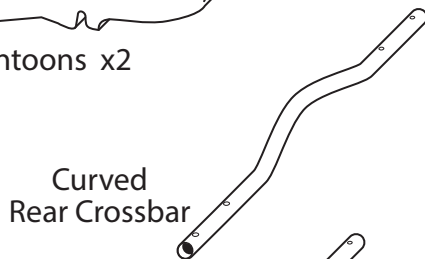


Curved
Rear Crossbar

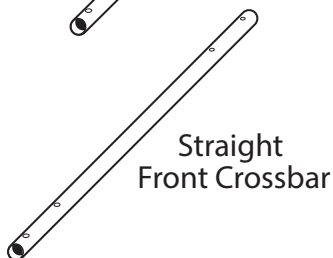

Straight
Front Crossbar



1 1/2" Bolts x8



5/8" Bolts x8



Crossbar End Caps x4

Product Care & Storage

This device is designed for comfort to lounge in the pool.

Each Float is made of durable, non-corrosive materials. However, prolonged exposure to sunlight and pool chemicals can cause permanent weakening of product. To extend product enjoyment:


1. Remove from pool when not in use.
2. Rinse with plain water after each use.
3. Store in a dry place away from direct sunlight and pool chemicals.

For Safety:


1. Do not jump on Lounge.
2. Keep Lounge out of rough play
3. Make sure all nut and bolt attachments are secured. Tighten as needed.
4. Check regularly for wear and tear.

Recommended Tools

Phillips Screwdriver

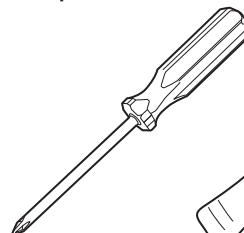

Rubber Mallet

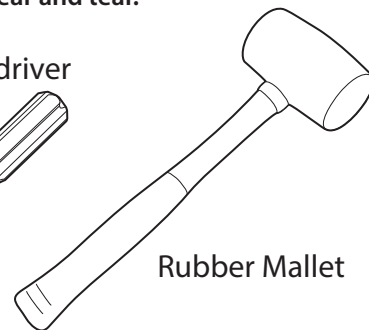

Need Assistance?

Call our Consumer Service Line:

800.854.1492


See our web page: poolmaster.com

eMail: info@poolmaster.com

Step 1


- Insert End Caps⁽⁴⁾ Into each end of both Cross Bars

Tip: Soften caps in warm water if difficult to insert

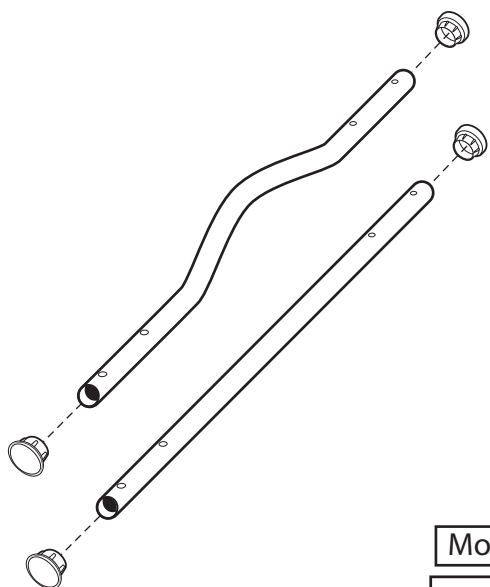

Step 2

- Turn the Lounge Seat upside down
- Attach Curved Rear Crossbar into pre-installed Mounting Slide on Lounge back.
NOTE: for proper alignment, match **Red Dots** on the curved rear crossbar to the back of the Lounge seat.
- Place Mounting Brackets on top and secure with two 5/8" Bolts as shown.
- Repeat Step 2 with front Crossbar on front mounting slides.

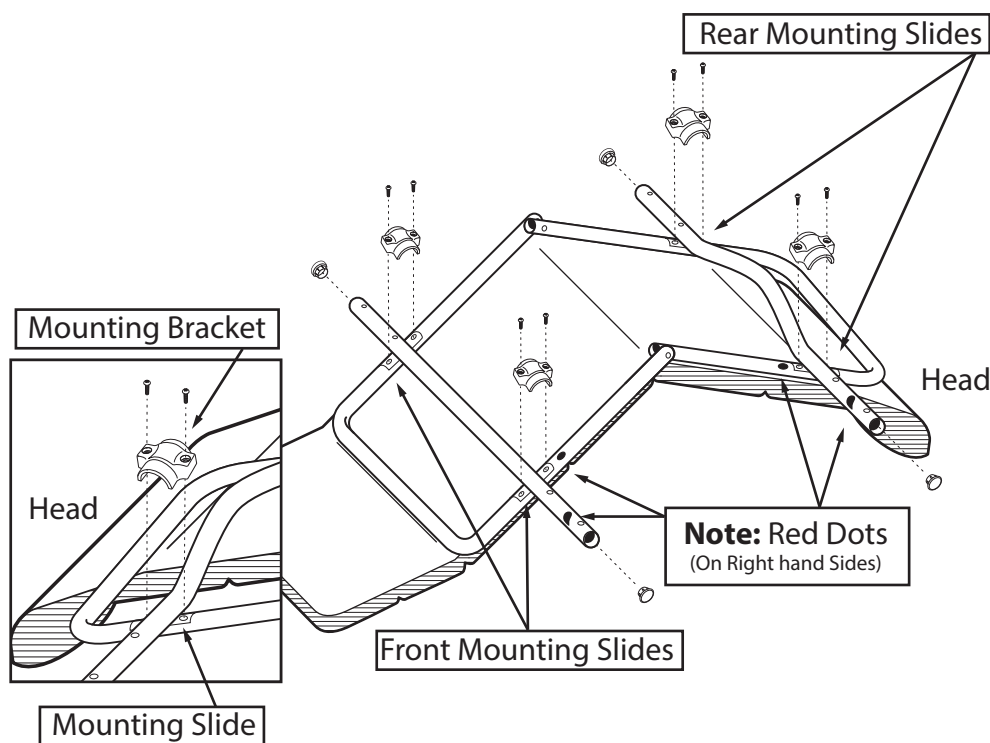

Step 3

- Place Pontoon face down on flat surface beside each other as shown.
- Place the ends of the Front Straight Crossbar into the channels of each small end of the Pontoon and align the mounting holes as shown.
- Place the ends of the Rear Curved Crossbar into the channels of the large end of the Pontoon and align the mounting holes as shown.
- Insert the four 1 1/2" bolts through the inside holes (closest to the seat) on both sides and into the molded nuts of the Polyform™ Pontoon Float.
Do not tighten.
- Insert the remaining four 1 1/2" bolts through the outside holes of both crossbars and into the molded nuts.
- Tighten all bolts, and enjoy.

Note: Complete lounge seat assembly from step 2 not shown.

